



**COMPLETE
COMPOSITE**

ARTIFICIAL GREEN WALL INSTALLATION TIPS

FOR MORE INFO PLEASE CONTACT:



0161 706 1414



INFO@COMPLETECOMPOSITE.CO.UK



Wall Types

To install the panels, we suggest screwing them directly into the wall using the appropriate screws, washers, and plugs based on the wall type. The plastic back panel has numerous holes and slots for this purpose.

Plasterboard

Screw directly into the wall using a 20mm plasterboard screw and washer with a good thread. Utilize the pre-made holes on the back of the panels.

Timber

Use simple timber screws, preferably with a large head or with washers.

Stone Wall & Concrete:

Pre-drill a hole, insert a plastic plug, and then use a screw with a washer. If drilling is not an option, consider cladding the wall with plywood and using timber screws.

Wire Fence

Secure the panels with black cable ties.

What tools will I need?



SCISSORS



SPIRIT LEVEL



PAINT*



HAND DRILL



FIXINGS

*For the best possible finish, consider painting your wall black or dark green.



01

Step 1 - Prepare the Panels

Ensure the plants on the panels are facing upward when held up to the wall. Verify that each panel is oriented the same way before installation by checking that the holes and clips are aligned consistently.

Step 2: Start from the Top Corner

Begin by fixing the top left or right corner first, then work your way across the wall. Use a spirit level to mark a guideline for fixing points along the top of the wall. Ensure the first panel is level before securing it. Use the guideline and the numerous holes and slots on the back of the panel for the screws.

Step 3: Attach Subsequent Panels


Position the next panel and screw it to the wall, using the guideline to keep it level. Clip the two panels together using the pins and holes on the sides of the panel backing grid.

Step 4: Complete the Top Row

Repeat this process until the top row is complete. Use three screws along the top of each panel to ensure it is completely flat against the wall. Once the top row is securely locked and fixed in place. Continue onto other rows if required, repeating the same steps

Step 5 : Final Touches


After installation, fluff and tease out the foliage to make the wall look lush and full. This step is especially important where the panels join to hide the seams.

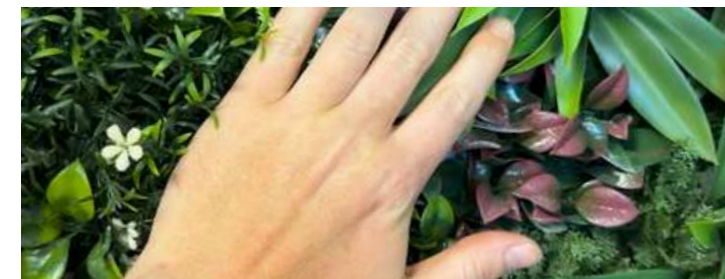

GET IN TOUCH:

DIRECT ACCOUNT CONTACT:

ALAN KENNY

 0791 8217855

 ALAN@COMPLETECOMPOSITE.CO.UK

MAIN OFFICE LINE

 0161 706 0990

 INFO@COMPLETECOMPOSITE.CO.UK

OR GET IN TOUCH WITH YOUR LOCAL HUWS GRAY BRANCH

